


DIMENSIONS

Features


- On door code change in seconds.
- Inside handle always retracts the latch for exit.
- Weather resistant.
- Tamper resistant, with stainless steel buttons, and clutch protection if the outside handle is forced.
- Reversible handles.
- Easy code change as often as required.
- Fits doors between 1 3/8" (35mm) and 2 3/8" (60mm) thick without modification.

Maintenance


No maintenance of the working parts is necessary. DO NOT OIL. To maintain the finish the lock should be cleaned regularly with a soft cloth. A silicone spray or similar should be used to provide a protective film against grit and grime.

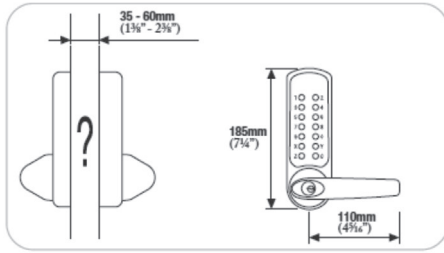

Model 600/605
For use with existing lock

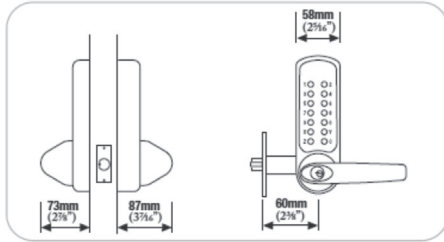

Model 610/615
With tubular latchbolt

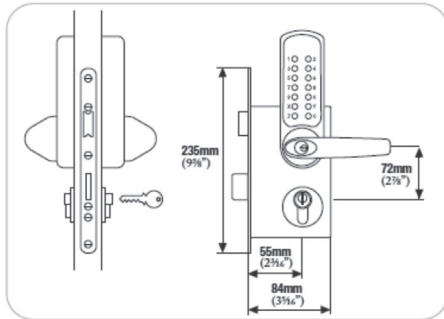

Model 620/625
With full 'Panic Function'
mortice lock & cylinder



CODE CHANGE GUIDE CL600 MECHANICAL LOCK



MANY CODES TO CHOOSE FROM

The CL600 range has been designed so the code can be changed on the door in seconds. The code chamber (models 600, 610 and 620) consists of 13 buttons and a 'C' button which is used to re-set (clear) the code chamber after an incorrect entry, and must always be used as the first digit of a code. Buttons may only be used ONCE in a code. For example C1212 is NOT possible.

The CL600 ranges code or combination, can be entered in any order or sequence; eg C1234 can be C4321 or C1342 or whatever sequence is most convenient to remember.

With 13 buttons, a total of 8,191 different codes are available, any of which can be entered in any sequence.

The total is arrived at as follows:

'C' plus 1 digit = 13	'C' plus 6 digit = 1716	'C' plus 11 digit = 78
"2" = 78	"7" = 1716	"12" = 13
"3" = 286	"8" = 1287	"13" = 1
"4" = 715	"9" = 715	Total = 8191
"5" = 1287	"10" = 286	

Note: Most people will set the code in the range of 4 to 7 digits, and the total number of codes in this range is 5,434. The lock is supplied with a random factory set code (see code card inside box). At any time this can be quickly changed to a new code of your choice. Typically codes are 4 to 7 digits long. Shorter codes are possible (1-2 digits) but are not recommended.

Access Under Control – The Simple and Easy Way



CODE CHANGE INSTRUCTIONS

The CL600 range offers significant advantages over other similar mechanical digital locks by allowing the code to be changed in seconds on the door.

1. Choose your code.
2. Insert key and turn anticlockwise to stop for right hand hung doors, or clockwise to stop for left hand hung doors. *Fig 1.*
3. Push the code change tool onto each button in turn, pushing in the buttons approx 3/32" (2mm) turn anticlockwise 180°. All buttons should now be in the non code position.
4. Test that all buttons are in non code position (perform step 6 before testing buttons) then depress the lever handle which should retract the latch. If latch cannot be retracted press 'C' button and repeat step 3.
5. To select a button as a code button, push code tool over button. Press in button with tool approx 3/32" (2mm) and turn clockwise 180°. *Fig 2.*
6. Now turn the key clockwise for right hand hung doors, or anticlockwise for left hand hung doors retracting the latch which will re-lock the code buttons. *Fig 3.*
7. Return the key to center and remove.
8. Before closing door test code.

Note: Models 605, 615, 625 only – Before changing code press the 'Z' and 'C' button to ensure that the lock is not in free passage mode.



Fig 1 (Image shows right hand hung door)

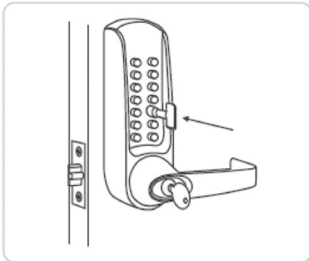


Fig 2


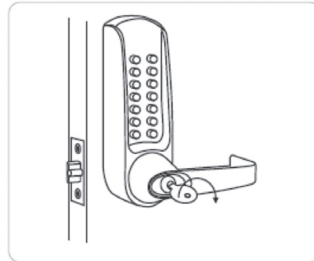



Fig 3 (Image shows right hand hung door)

REMOVAL OF FRONT LOAD CYLINDERS TO RE-PIN OR REPLACE WITH CYLINDERS.

1. Remove handle and cylinder cover.

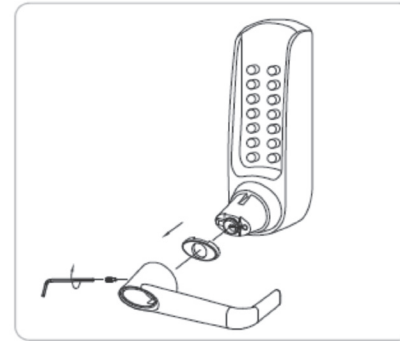

2. Turn Key 90° anticlockwise and remove the cylinder from boss

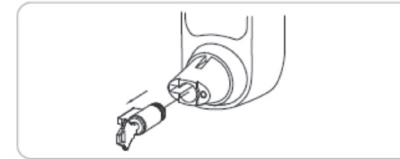

3. To replace cylinder, reinsert and turn 90° clockwise. Replace the cylinder cover and handle.

*If intending to use a cylinder from a different manufacturer it is advisable to confirm beforehand that the new cylinder will fit the boss.


Note that the CL600 uses a 6 pin screw cap cylinder.

If using a screw cap cylinder other than supplied, the tail piece from the Codelocks screw cap cylinder will need to be fitted as follows:




4. Hold down the control pin in the end of the cylinder and unscrew the cap.

Caution! Do not insert the key in the cylinder once you have removed the screw cap!

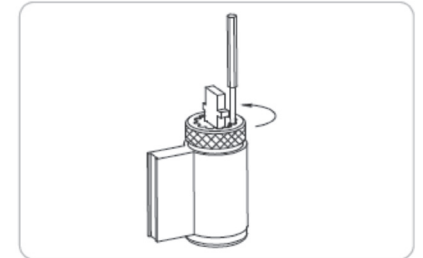

5. Refit the tailpiece, hold down the control pin and screw the cap on fully without tightening. Ensure the control pin projects to lock the cap.

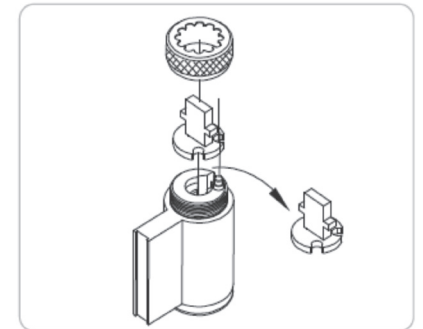

Test the key operation

If the key is difficult to insert, or tight when turning, then the cap may be too tight. Loosen the cap one notch at a time and try the key again. If the key inserts and turns OK, but is difficult to remove, then the cap may be too loose.

Tighten up the cap one notch at a time.

Adjust the cap until the key inserts, turns and removes easily.